



Portable CD Player with Radio
Model : HX-302CD / HX-303CD



Remark: Please read and follow these instructions, before using your unit.

WARNING:



TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

* Caution Marking and rating plate was located at bottom enclosure of the apparatus

Les marquages sont inscrits en bas de l'appareil.

Les precautions d'emploi sont inscrites en bas de l'appareil.

 <p>The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p>CAUTION</p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>Warning: To reduce the risk of electric shock, do not remove cover (or back) no user-serviceable parts inside. Refer servicing to qualified service personnel.</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
---	---	---


- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquid, tel qu'un vase, ne doit être placé sur l'objet.
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely. The mains plug should be disconnected from the mains socket outlet completely.

- La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- Location of label on the apparatus if that label was affixed under a lid or on the bottom of the apparatus with a mass not exceeding 7 kg.

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) Grounding or Polarization – This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
Alternate Warnings - This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.



- 17) Ventilation – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 17) The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- 18) : CLASS II apparatus with double insulation, and no protective earth provided.

Note :

1. Important safety instructions shall be provided with each appliance. These safety instructions may be in the form of a separate booklet, separate sheet, or part of the instruction manual.
2. If being included in the instruction manual, the safety instructions shall be located before any operating instructions.
3. These instructions shall be entitled "IMPORTANT SAFETY INSTRUCTIONS"
4. The safety instructions shall include, as applicable to the particular apparatus, the information and warnings listed before. The wording is capable of being supplements, although not replaced, by drawing or cartoons.
5. The symbol shall be shown adjacent to the text of Important Safety Instructions.

FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING:

 
Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

Under the influence of electrostatic phenomenon, the product may malfunction and require user to reset.

Under the environment with surge, the product may malfunction and require user to reset.


LOCATION OF CONTROLS

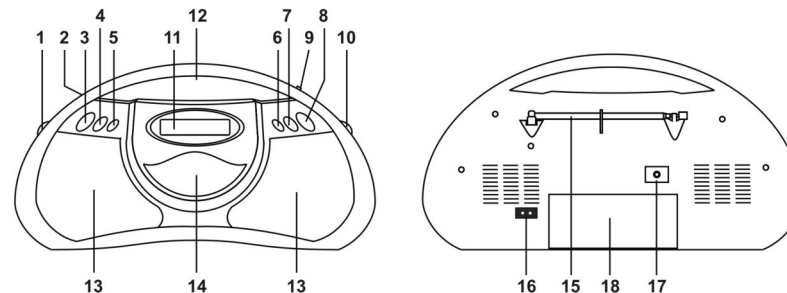

- | | |
|----------------------|-------------------------------|
| 1. Volume Control | 11. LCD Display |
| 2. Headphone Jack | 12. Handle |
| 3. SKIP DOWN Button | 13. Speaker |
| 4. SKIP UP Button | 14. CD Compartment |
| 5. PROGRAM Button | 15. Antenna |
| 6. REPEAT Button | 16. AC Socket |
| 7. STOP Button | 17. Aux-in Jack |
| 8. PLAY/PAUSE Button | 18. Battery Compartment Cover |
| 9. Function Switch | |
| 10. Tuning Control | |

AC OPERATION

 Connect the plug to the AC socket of the unit and the other end to a standard AC outlet.

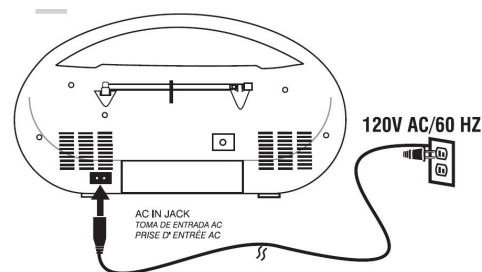


ATTENTION

1. Do not plug or unplug the power cable while you have wet hands;
2. When planning not to use this unit for a long time, disconnect the power cable from the wall outlet;
3. When disconnecting the power cord from the wall outlet, do not pull on the cord in order to avoid shock risks caused by damaged cable.

BATTERY OPERATION

 
Disconnect the AC Cord Set completely. Open the Battery Compartment Door and insert 6 pieces UM-2 "C" size batteries into the battery compartment with battery polarity as shown inside the battery compartment.

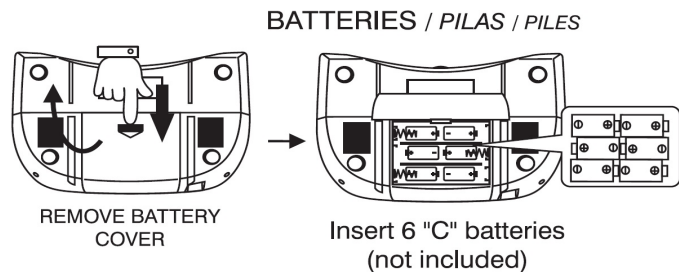

RADIO OPERATION

1. Slide the Function Switch to the "AM" or "FM" position.
2. Turn the Tuning Knob to your desired radio station.
3. Adjust the sound level by rotating the Volume Control.

 
LISTENING TO THE RADIO / ESCUCHA DE LA RADIO / ÉCOUTE DE LA RADIO

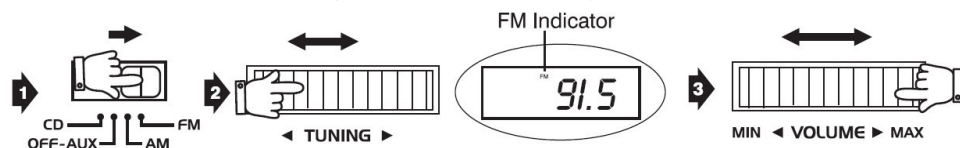

ANTENNA

For best reception, fully extend the FM Antenna to receive FM stations. For AM reception, the unit has a built-in antenna, turn the whole unit for best reception.

 TO IMPROVE RECEPTION
PARA MEJORAR LA RECEPCIÓN
POUR AMÉLIORER LA RÉCEPTION

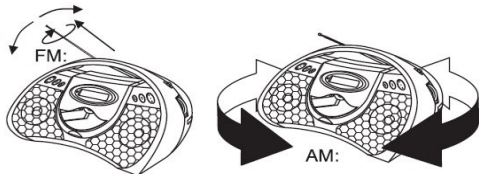

CD FUNCTION

To play a CD, please follow the steps underneath:

1. Set the Function Switch to the CD position;
2. Open the CD door, Insert the CD with the printed side facing up and close the CD door;
3. Disc information (total number of tracks) will appear on the LCD display;
4. Press PLAY/PAUSE button to start playing the CD;
5. Adjust the volume control to the desired volume level;
6. Press STOP button to stop playing the CD.

LISTENING TO A CD / ESCUCHE UN DISCO COMPACTO / ÉCOUTE D'UN DISQUE COMPACT



Skip Mode

1. During play or pause mode, press the SKIP UP button to go to the next track.
2. During play or pause mode, press the SKIP DOWN button to go back to the beginning of the track.
3. During play mode, press the SKIP DOWN button twice will go back to the previous track.

Programming the CD Player

The programming of the CD player should be done during **STOP** mode.

1. Press the PROGRAM button to begin programming the CD player;
2. Press SKIP UP or SKIP DOWN buttons, to select desired track;
3. Press PROGRAM button again to store this track in memory;
4. Repeat steps from 2 to 3 to store more tracks in memory. You can store a maximum of 20 tracks in the memory.
5. Press PLAY/PAUSE button to play the disc in the programmed order;
6. To stop playing, press STOP button.
7. To cancel the programming, press STOP button and open the CD player door or select a different function (OFF-AUX, AM or FM)

 


Repeat Play Mode

Press the REPEAT button to select repeat play mode with the following sequence.

Repeat 1 ➔ Repeat All ➔ Normal

- Repeat 1 – repeat the track being played.
- Repeat All – repeat all the tracks in the storage media.
- Normal – play the tracks in sequence.

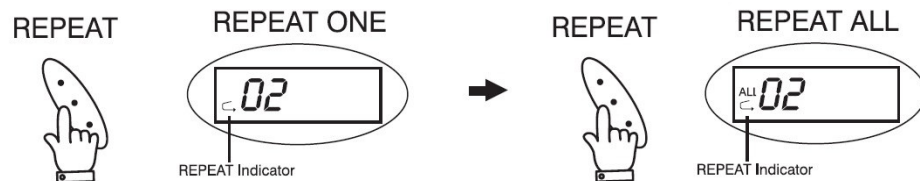


Turn Off CD Operation

To turn off the CD operation, set the Function Switch to **OFF/AUX** position.

AUX IN CONNECTION

 
1. Insert one side of the audio cable (requires 3.5mm stereo plug, not supplied) into the line-out jack or phones jack on your MP3 player and the other side to the aux-in jack on the unit.
2. Turn on the unit and set the Function Switch to **OFF/AUX** position.
3. Turn on your MP3 player and follow the playback instruction.
4. To stop this function, simply turned off your MP3 player.

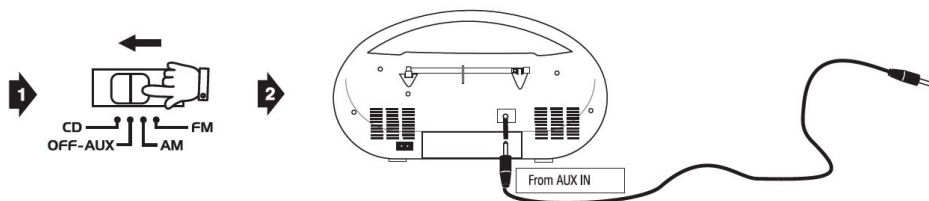

STEREO HEADPHONE JACK

For private listening, insert the plug of a stereo headphone into the phones jack and adjust the volume control accordingly. During the use of a headphone, the speakers are automatically disconnected.

 
LISTENING WITH HEADPHONES (NOT INCLUDED)

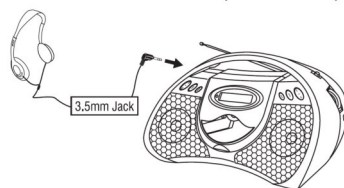

CARE AND MAINTENANCE

- Always turn off the unit after use.
- Keep the unit away from magnetic objects, water or heat sources.
- Use a clean soft cloth moistened with lukewarm water to clean the cabinet. Never use chemical cleaners that could damage the finish of the unit.
- Never touch the CD pickup and lens. If fingerprints get on the pickup lens, clean it gently with a commercial lens cleaner.
- Disconnect the unit from any power sources before cleaning.
- To remove a disc from its storage case, press down on the centre of the case and lift the disc out, holding it carefully by the edges.
- Never use chemicals such as record sprays, anti-static sprays, benzene or thinners to clean compact discs. These chemicals can irreparably damage the disc's surface.
- Discs should be returned to their cases after use. This avoids serious scratches that could cause the Laser pickup to skip.
- Do not expose discs to direct sunlight, high humidity, or high temperatures for extended periods. Long exposure to high temperatures can warp the disc.
- Do not stick paper or write anything with a ballpoint pen on the label side of the disc.

SPECIFICATIONS

Power supply:	AC 120V ~ 60Hz
	DC 9V  (UM-2 x 6)
Frequency range:	FM 88 – 108 MHz
	AM 530 – 1710 KHz

Specifications are subject to change without further notice.