



Wooden Table with Qi Wireless charging, USB charging, and Bluetooth

Model : HX-201Qi



Bluetooth Pairing Code : HX-201Qi HANNLOMAX

INSTRUCTION MANUAL

Note: Please read and follow these instructions before using your unit.

1. Read these instructions. Keep these instructions. Heed all warnings. Follow all instructions.
2. Do not use this apparatus near water.
3. Clean only with dry cloth.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
6. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
7. Only use attachments/accessories specified by the manufacturer.
8. Unplug this apparatus during lightning storms or when unused for long periods of time.
9. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
10. Ventilation – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
11. The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
12. : CLASS II apparatus with double insulation, and no protective earth provided.
13. Caution Marking and rating plate was located at bottom enclosure of the apparatus.
14. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
15. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
16. The mains plug is used as disconnect device. The mains plug of apparatus should not be obstructed OR should be easily accessed during intended use. To be completely disconnect the power input, the mains plug or apparatus shall be disconnected from the mains.

FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

 
 
 
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions :

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

LOCATION OF CONTROLS

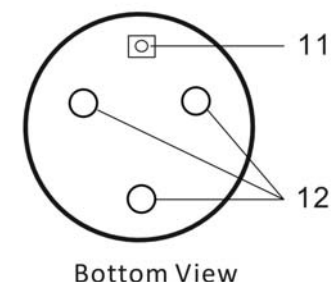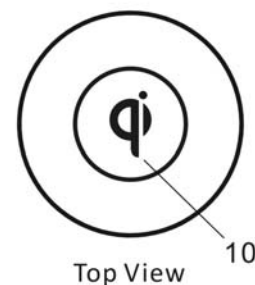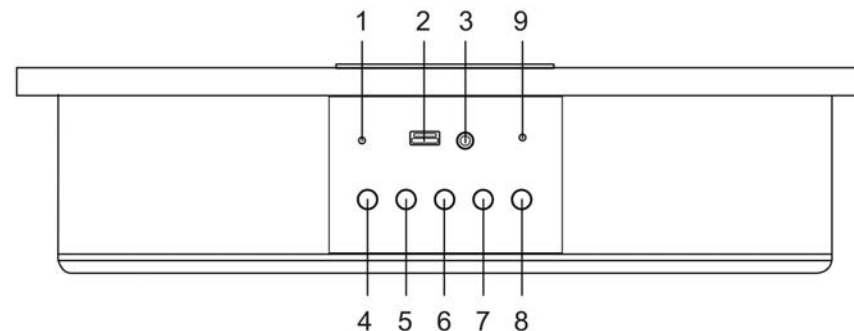

1	Mode Indicator	7	Bluetooth Unpair Button
2	USB charging port (1A)	8	Qi Wireless charging indicator
3	Aux-in Jack	9	Wireless charging Pad
4	Mode / Standby button	10	DC Jack
5	Volume - / Previous Button	11	Table Leg connection
6	Volume + / Next Button	12	

Note : The rating label has marked on the bottom panel of the apparatus..

Specifications

Power Supply: AC 100V-240 ~ 60/50 Hz
AC/DC adapter: DC9V ~ 3.5A
USB Rated Output: DC5V 1A

 
Specifications are subject to change without further notice.

SETTING UP THE TABLE

Connect the 3 identical legs to the bottom of the table.


CONNECTING THE UNIT TO POWER

Plug one end of the AC adaptor into the DC power Input, and then plug the other end into AC wall outlet. Before switching on the unit, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate.

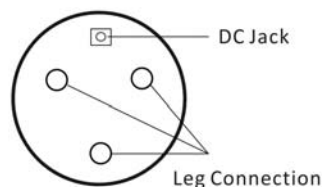

WIRELESS CHARGING

 When the unit is on, place a supported mobile device on the wireless charging pad. The wireless charging indicator will be on as below:

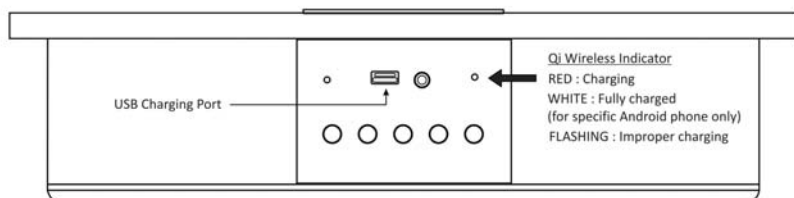

1. While charging, the Qi indicator will be RED.
2. When fully charged, the Qi indicator will turn WHITE for some specific Android phones, For other smart phones, the Qi indicator will stay RED.
3. If improper charging or charging error (see note below), the Qi indicator will keep FLASHING. You can also check the charging icon displayed on the mobile device's screen for the charging status.

Note :

 
- If the mobile device is not placed properly on the wireless charging pad, or depending on the location of the mobile device's wireless charging coil, your mobile device may not charge properly.
- When the mobile device is fully charged, remove it from the wireless charger.
- Do not place foreign materials, such as metal objects, magnets and magnetic stripe card between the mobile device and the wireless charger. The mobile device may not charge properly or may be damaged due to overheating.
- Wireless charging may not work properly if you have attached a thick case to your mobile device. If your case is thick, remove it before placing on the wireless charger.
- Wireless charging uses magnetic field. Do not place too close with magnetic stripe or chip card (ID card, bank card etc.) to avoid magnetic failure

The wireless charger is compatible with Wireless Power Consortium (WPC) certified devices.

USB CHARGING

Connect the USB cable to your device and the unit's USB port. The unit will charge your device, such as smartphones or tablets. .The unit contains one USB port with 1A charging.

BLUETOOTH STREAMING

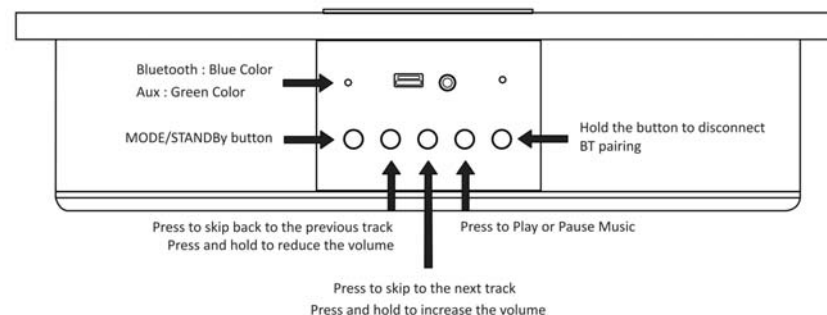

1. Press and hold the **MODE / STANDBY** button to turn the unit on. Press the **MODE / STANDBY** button to select the **BLUETOOTH** mode. The mode indicator will light up and the **BLUE LED** (Bluetooth mode) will flash.
2. Turn on your Bluetooth of your Bluetooth device and search the speaker for connection. Your Bluetooth device should find "**HX-201Qi HANNLOMAX**".
3. If connection is successful, the BLUE LED will stop flashing and remains light up.
4. Select and play the audio files through your Bluetooth device.
5. Press the **||** button to play/pause playing.
6. To adjust the volume, press and hold **VOLUME –** or **VOLUME +** button.
7. To stop the streaming, press and hold the **MODE / STANDBY** button.

SKIP MODE

1. During play or pause mode, press the **||** Button to go to the next track.
2. During play or pause mode, press the **||** Button to go back to the beginning of the track and press twice to go back to the previous track.

BLUETOOTH AUTO PAIRING

Once the unit paired with the Bluetooth device, it will automatically pair with that device next time when you turn on the unit and that Bluetooth device.

BLUETOOTH UNPAIRING

Press and hold **Bluetooth Unpair Button** to disconnect the Bluetooth pairing.

AUX IN CONNECTION

1. Insert one side of the audio cable (requires 3.5mm stereo plug, not supplied) into the line-out jack or phones jack on your audio device and the other side to the aux-in jack on the unit.
2. Press and hold the **Mode / Standby button** to turn the unit on. Press **Mode / Standby button** to select the Bluetooth mode. The mode indicator will light up and the **GREEN LED** (Aux-in mode) will flash.
3. Turn on your audio device and follow the playback instruction.
4. To stop this function, remove the audio cable from the unit and press and hold the **Mode / Standby button**.