



HX-601K

**Radio Cassette Recorder with Bluetooth
(Bluetooth Pairing Code : HX-601K HANNLOMAX)**



INSTRUCTION MANUAL

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
6. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
7. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
8. Only use attachments/accessories specified by the manufacturer.
9. Unplug this apparatus during lightning storms or when unused for long periods of time.
10. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
11. Caution Marking and rating plate was located at bottom enclosure of the apparatus.
12. **WARNING :** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
13. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
14. The mains plug is used as disconnect device. The mains plug of apparatus should not be obstructed OR should be easily accessed during intended use. To be completely disconnect the power input, the mains plug or apparatus shall be disconnected from the mains.
15. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

 
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions :

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

LOCATION OF CONTROLS

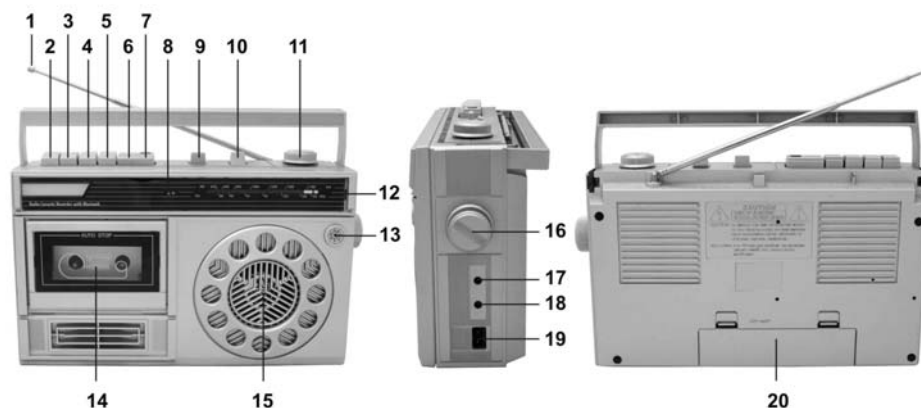

- | | |
|----------------------|--------------------------|
| 1. Antenna | 11. VOLUME Control |
| 2. PAUSE Button | 12. Dial Scale |
| 3. STOP/EJECT Button | 13. Condenser Microphone |
| 4. F.F Button | 14. Cassette Compartment |
| 5. REW Button | 15. Speaker |
| 6. PLAY Button | 16. TUNING Control |
| 7. REC Switch | 17. Earphone Jack |
| 8. BT Indicator | 18. DC Jack (6V) |
| 9. FUNCTION Switch | 19. AC Socket |
| 10. BAND Switch | 20. Battery Compartment |

AC OPERATION

Before operation, please make sure that the unit is set to the voltage corresponds to the VOLTAGE of your local area. Insert one end of the supplied power cord into the AC Socket at the side of the unit, and the other end into the wall outlet.

Note : When the power cord is not being used, disconnect it from the wall outlet.

BATTERY OPERATION

Open the Battery Compartment Door and insert 4 x UM-1 D size batteries, make sure to observe the proper polarity as indicated inside the battery compartment.

USING THE DC POWER INPUT JACK

Plug one end of the 6V AC adaptor (not included) into the unit's DC Jack (6V), and then plug the other end into AC wall outlet. Before switching on the unit, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate.

RADIO OPERATION

1. Set the FUNCTION Switch to RADIO position.
2. Set the Band Switch to AM or FM position.
3. Rotate the TUNING Control to select the desired radio station.
4. For FM reception, adjust the rod antenna appropriately to obtain best reception.
5. Adjust the VOLUME Control to the desired listening level.
6. To turn off the radio, set the FUNCTION Switch to TAPE/OFF position.

CASSETTE OPERATION

Tape Playback

1. Press the STOP/EJECT Button to open the cassette door, insert a cassette tape into the Cassette Compartment and push the cassette door to close.
2. Slide the FUNCTION Switch to TAPE/OFF position and press the PLAY Button to start playing the tape.
3. Adjust the VOLUME Control to your desired volume level.
4. To stop the tape, simply press the STOP/EJECT Button.

Fast Forward and Rewind

The tape can be fast forward or rewind by pressing the F.F. Button or REW Button respectively.

Auto Stop System

When the tape runs to its end during playback or recording, the cassette operation will be stopped automatically.

Caution : To avoid damage to the cassette mechanism or to the cassette tape, always press the STOP Button between each operation

Recording From Radio

1. Set the FUNCTION Switch to RADIO position.
2. Tune to desired radio program as described in the 'RADIO OPERATION' section.
3. Insert a blank cassette tape into the Cassette Compartment.
4. Press the REC Button and the PLAY Button simultaneously to start recording. With the built-in Automatic Level Control (ALC), the best recording quality is automatically adjusted. Changing the volume level will not affect the recording.
5. To stop recording, press the STOP/EJECT Button.
6. When the tape runs to its end, the cassette operation will be stopped automatically.

Recording From Built-In Microphone

1. Set the FUNCTION Switch to TAPE/OFF position.
2. Insert a blank cassette tape into the Cassette Compartment.
3. Press the REC Button and the PLAY Button simultaneously to start recording. With the built-in Automatic Level Control (ALC), the best recording quality is automatically adjusted. Changing the volume level will not affect the recording.
4. To stop recording, press the STOP/EJECT Button.
5. When the tape runs to its end, the cassette operation will be stopped automatically.

BLUETOOTH OPERATION

Connecting BLUETOOTH

1. Slide the FUNCTION Switch to BT position, the **BT** indicator will light up.
2. Turn on the Bluetooth of your Bluetooth device and search the unit for connection. Your Bluetooth device should find "HX-601K HANNLOMAX".
3. Pair your Bluetooth device with the unit.
4. Select and play the audio file through your Bluetooth device.

Auto Paring

The unit has auto pairing function. Once the unit paired with the Bluetooth device, it will automatically pair with that device next time when you turn on the unit and that Bluetooth device.

Turn Off the Bluetooth Operation

To turn off the BLUETOOTH operation, slide the FUNCTION Switch to other position (RADIO or TAPE/OFF).

STEREO HEADPHONE JACK

For private listening, insert the plug of a stereo headphone into the Earphone Jack and adjust the VOLUME Control Knob accordingly. During the use of a headphone, the speaker is automatically disconnected.



SPECIFICATIONS

Frequency Range:	AM 540 - 1710 KHz
	FM 88 - 108 MHz
Power Supply:	AC 120 ~ 60 Hz
	DC 6V (UM1 X 4)

Specifications are subject to change without further notice.

CARE AND MAINTENANCE

  - Always turn off the unit after use.
- Keep the unit away from magnetic objects, water or heat sources.
- Use a clean soft cloth moistened with lukewarm water to clean the cabinet. Never use chemical cleaners that could damage the finish of the unit.
- Disconnect the unit from any power sources before cleaning.
- If the tape is loose in its cassette, take up the stack by inserting a pencil in one of the reels and rotating.
- If the tape is loose it may get stretched, cut or caught in the cassette player.
- Do not touch the tape surface.
- To prevent recordings from being erased accidentally, remove the tab(s) A and B

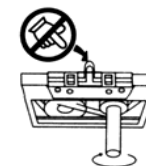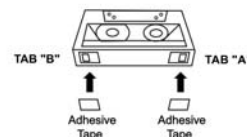

- To record after the tabs have been broken off, reseal the A and B with a piece of adhesive tape.