



ALARM CLOCK RADIO WITH USB CHARGING



Model : HX-128CR



Note: Please read and follow these instructions before using your unit.

WARNING

TO PREVENT ELECTRIC SHOCK; DO NOT USE THIS PLUG WITH AN EXTENSION CORD RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADES EXPOSURE.
TO PREVENT FIRE OR SHOCK HAZARD; DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.


 <p>The lighting flash with arrowhead symbol, with an equilateral triangle is intended to alert the user to the presence of un-insulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p style="text-align: center;">CAUTION</p> <p style="text-align: center;">RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.</p>
--	---	--

1. Keep these instructions.
2. Heed all warnings.
3. Follow all instructions.
4. Do not use this apparatus near water.
5. Clean only with dry cloth.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Only use attachments/accessories specified by the manufacturer.
10. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 2) Unplug the apparatus during lightning storms or when unused for long periods of time.
- 3) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

QUICK REFERENCE

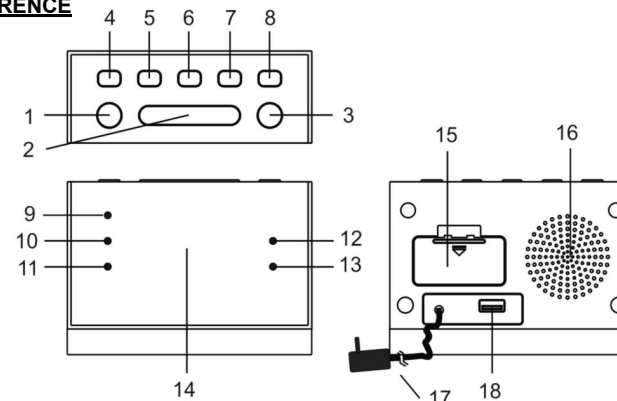

1. SOURCE / AL. OFF

- Use this button to turn on the unit.
- Use this button to turn the ALARM off after Alarm activates.

2. SNOOZE /SLEEP/DIMMER

- Use this button to temporarily suspend the ALARM for a short period.
- Use this button to set the sleep time.
- HOLD to select the LED display brightness

3. LIGHT

- Use this button to select the brightness of NIGHT LIGHT

4. SKIP DOWN/ HOUR

- Use this button to adjust the hour in CLOCK or ALARM time
- Use this button to search the radio station in backward direction.

5. SKIP UP/ MIN

- Use this button to adjust the minute in CLOCK or ALARM time
- Use this button to search the radio station in forward direction.

6. CLK / MEM

- Use this button to set the clock
- Use this button to store radio stations in the memory.
- Use this button to select the stored radio stations in the memory.

7. AL1 / VOLUME-

- Use this button to set the alarm time in ALARM 1
- Use this button to decrease the volume.

8. AL2 / VOLUME+

- Use this button to set the alarm time in ALARM 2
- Use this button to increase the volume.

9. PM INDICATOR (FOR 12 HOURS SETTING VERSION ONLY)

10. **ALARM 1 BUZZER INDICATOR**(This indicator shows that the unit is in ALARM 1 buzzer mode.)

11. **ALARM 1 RADIO INDICATOR**(This indicator shows that the unit is in ALARM 1 radio mode.)

12. **ALARM 2 BUZZER INDICATOR**(This indicator shows that the unit is in ALARM 2 buzzer mode.)

13. **ALARM 2 RADIO INDICATOR** (This indicator shows that the unit is in ALARM 2 radio mode.)

14. LED DISPLAY

15. **BATTERY COMPARTMENT** (Compartment for the back-up battery.)

16. SPEAKER

17. **DC Adaptor** (DC cable also acts as FM antenna)

18. **USB SLOT FOR 1A CHARGING** (Connect a USB cable to charge your device.)

CONNECTING THE UNIT TO POWER

Plug AC power adapter to the AC wall outlet. Before switching on the unit, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate.

BATTERY BACKUP

Insert two pieces UM-4 batteries into the battery compartment. Be sure to observe the proper polarity (the "+" and "-" signs) as indicated inside the battery compartment.

In case of power failure or interrupted AC power, the current time and alarm time settings, the stored radio stations are preserved in the memory of the unit by means of battery back-up function.

USB CHARGING (1A)

Connect the USB cable to your device and the clock's USB port. The unit will charge your device, such as smartphones or tablets.

DIMMER CONTROL

Press and Hold the **DIMMER** button to select the brightness of the LED display

NIGHT LIGHT

Press **LIGHT** button to turn on the night light. Press repeatedly to select the desired brightness of night light.

SETTING THE CLOCK

1. Make sure the unit in CLOCK mode(Press **SOURCE / AL. OFF** button until the LED display shows "**OFF**")
2. Press and hold the **CLK / MEM** button for about 1 second, the time will begin to flash.
3. Press the **HOURL** button to adjust the hour.
4. Press the **MIN** button to adjust the minute.
5. When the correct time is selected, press the **CLK / MEM** button again to confirm.

SETTING THE ALARMS

1. With the unit in CLOCK mode, press and hold the **AL1** (for Alarm 1) or **AL2** (for Alarm 2) button. The ALARM time will begin to flash on the display.
2. Press the **HOURL** button to adjust the alarm hour.
3. Press the **MIN** button to adjust the alarm minute.
4. When the desired alarm time is selected, press the **AL1** or **AL2** button to confirm.
5. Press the **AL1** or **AL2** button to select the ALARM sound mode - **buzzer** or currently set **radio** station. The alarm buzzer or radio indicator will light up.

SNOOZE FUNCTION

1. Whenever the alarm (radio or buzzer) activates, it can be temporarily suspended for a short period of 9 minutes by pressing the **SNOOZE** button once.
2. The buzzer or radio will then automatically activate again after the 9 minutes SNOOZE period has ended.
3. This procedure can be repeated for up to approximately one hour.

TURN OFF THE ALARM

When the Alarm activate, press the **SOURCE / AL. OFF** button to turn off the Alarm.

LISTENING TO THE FM RADIO

1. Press the **SOURCE / AL. OFF** to select FM radio.
2. **AUTO TUNING:** Press and hold the **SKIP DN/SKIP UP** button for approx.1 second, it will start to search the next radio station in the direction of the search. The search operation simply finds stations with strong signals. Stations with weak reception can only be tuned in manually.

Note**: Fully extend the cable of the adaptor and try different position for better FM reception. The adaptor cable acts as the FM antenna.

3. **MANUAL TUNING** : Press the **SKIP DN/SKIP UP** button step by step to tune to the desired radio stations.
4. To turn off the radio, press the **SOURCE / AL. OFF** button. LED Display will show "**OFF**"

SAVING A RADIO STATION TO THE MEMORY

1. Tune the radio to the desired station.
2. Press and hold the **CLK / MEM** button to store this radio station in the next memory station number. The display will show **PXX** (XX is the memory station number from 01 to 10)
3. Press **SKIP DN/SKIP UP** button to select the number of memory station number. Press **CLK / MEM** button to confirm.
4. Up to 20 FM radio stations can be stored in the memory.

TO LISTEN TO A SAVED RADIO STATION

1. Press the **SOURCE / AL. OFF** button to select FM radio.
2. Press the **CLK / MEM** button to skip to the next stored radio station.

SLEEP TO MUSIC FUNCTION

1. This function allows you to listen to the radio while you fall asleep.
2. In radio mode, press the **SLEEP** button, the display will show the default sleep time of 90 minutes.
3. Press the **SLEEP** button repeatedly to set the desired sleep time. (90-80-70-60-50-40-30-20-10 min. or OFF)
4. After the pre-set time has elapsed, the radio will turn off automatically.

SPECIFICATIONS

Frequency Range:	FM: 87.5 - 108 MHz
Power Supply:	AC 100-240V ~ 50/60 Hz
Rated Output	DC5V --- 1.5A
Back-Up Battery:	2 pcs. UM4 "AAA" size (Battery not included)
USB Charging:	1A

Specifications are subject to change without prior notice.