





ALARM CLOCK RADIO WITH QI WIRELESS CHARGING AND USB CHARGING(2.4A)



Model :HX-203QI

WARNING

TO PREVENT ELECTRIC SHOCK; DO NOT USE THIS PLUG WITH AN EXTENSION CORD RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADES EXPOSURE.
TO PREVENT FIRE OR SHOCK HAZARD; DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>The lighting flash with arrowhead symbol, with an equilateral triangle is intended to alert the user to the presence of un-insulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p style="text-align: center;">CAUTION</p> <p style="text-align: center;">RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED PERSONNEL.</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.</p>
--	--	--

SPECIFICATIONS


Frequency Range:	FM: 87.5 - 108 MHz
Power Supply:	AC 100-240V ~ 50/60 Hz
Rated Output	DC9V --- 3.5A
USB Charging Current:	2.4 A

Specifications are subject to change without prior notice.

CONNECTING THE UNIT TO POWER

Plug AC power adapter to the AC wall outlet. Before switching on the unit, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate.

QUICK REFERENCE

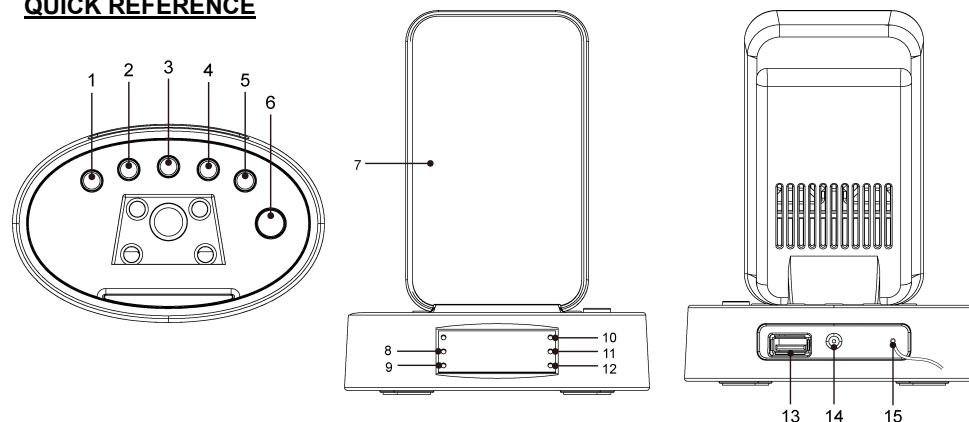

1. TUN - / HOUR

- Use this button to adjust the hour in CLOCK or ALARM time
- Use this button to search the radio station in backward direction.

2. TUN+ / MIN

- Use this button to adjust the minute in CLOCK or ALARM time
- Use this button to search the radio station in forward direction.

3. ON / PRESETS BUTTON

- In Clock mode, press and Hold to Set the CLOCK
- Press this button to turn on the radio
- In RADIO mode, press and hold this button to store radio stations in the memory.
- In RADIO mode, press this button to select the stored radio stations in the memory.

4. OFF / AL 1 / VOL -BUTTON

- In Radio mode, press this button to increase the volume.
- In RADIO mode, press and hold this button to turn off the radio .
- In Clock mode, press this button to set the ALARM 1..

5. AL 2 / VOL + BUTTON

- In Radio mode, press this button to decrease the volume.
- In Clock mode, press this button to set the ALARM 2..

6. SLEEP/SNOOZE /DIMMER BUTTON

- In Radio mode, use this button to set the sleep time.
- When alarm activates, use this button to temporarily suspend the ALARM for a short period.
- In Clock mode, press the button to select the LED display brightness

7. Qi Wireless Charging Pad (Place the Qi supported phone for wireless charging)

8. ALARM 1 BUZZER INDICATOR (This indicator means it is in ALARM 1 buzzer mode.)

9. ALARM 1 RADIO INDICATOR (This indicator means it is in ALARM 1 radio mode.)

10. Qi Wireless Charging Indicator (This Indicator shows the status the wireless charging)

11. ALARM 2 BUZZER INDICATOR (This indicator means it is in ALARM 2 buzzer mode.)

12. ALARM 2 RADIO INDICATOR (This indicator means it is in ALARM 2 radio mode.)

13. USB SLOT FOR 2.4A CHARGING (Connect a USB cable to charge your device.)

14. DC Jack (Connect AC/DC Adaptor)

15. FM ANTENNA (Extend for better FM radio reception)

SETTING THE CLOCK

1. Make sure the unit in **CLOCK** mode (LED Display shows the time only)
2. Press and hold the **ON/ PRESETS** button for about 1 second, the time will begin to flash.
3. Press the **TUN-/ HOUR** button to adjust the hour.
4. Press the **TUN+ / MIN** button to adjust the minute.
5. When the correct time is selected, press the **ON/ PRESETS** button again to confirm.

SETTING THE ALARMS

1. With the unit in **CLOCK** mode, press and hold the **OFF/ AL 1 / VOL -AL 1** button (for Alarm 1) or **AL 2 / VOL +** (for Alarm 2) button. The **ALARM** time will begin to flash on the display.
2. Press the **⏮ / HOUR** button to adjust the alarm hour.
3. Press the **⏭ / MIN** button to adjust the alarm minute.
4. When the desired alarm time is selected, press the **OFF/ AL 1 / VOL -AL 1** button (for Alarm 1) or **AL 2 / VOL +** (for Alarm 2) button.
5. Press the **OFF/ AL 1 / VOL -AL 1** button (for Alarm 1) or **AL 2 / VOL +** (for Alarm 2) button to select the **ALARM** sound mode - **buzzer** or currently set **radio** station. The alarm buzzer or radio indicator will light up. The alarm indicator will show the alarm status as below :

Indicator on the display in alarm setting

Wake To Buzzer ➡	<input checked="" type="radio"/> Buzzer <input type="radio"/> Radio
Wake To Radio ➡	<input type="radio"/> Buzzer <input checked="" type="radio"/> Radio
Alarm OFF (no indicator) ➡	<input type="radio"/> Buzzer <input type="radio"/> Radio

AL1-B indicator is on – Alarm 1 wake up mode is buzzer

AL1-R indicator is on – Alarm 1 wake up mode is FM radio

AL2-B indicator is on – Alarm 2 wake up mode is buzzer

AL2-R indicator is on – Alarm 2 wake up mode is FM radio

Note : If you choose **AL1-R** or **AL2-R** as the alarm wake up source, alarm will go to the last FM radio station that you listened.

SNOOZE FUNCTION

1. Whenever the alarm (radio or buzzer) activates, it can be temporarily suspended for a short period of 9 minutes by pressing the **SNOOZE/SLEEP/DIMMER** button once.
2. The alarm will then automatically activate again after the 9 minutes **SNOOZE** period has ended.
3. This procedure can be repeated for up to approximately one hour.

TURN OFF THE ALARM

When the Alarm activate, press the **OFF/ AL 1 / VOL -** button to turn off the Alarm.

CANCEL ALARM SETTING

Press the **OFF/ AL 1 / VOL -AL 1** button (for Alarm 1) or **AL 2 / VOL +** (for Alarm 2) button repeatedly until all alarm indicators go off.

DIMMER FUNCTION

In Clock Mode, press the **SLEEP/SNOOZE/DIMMER** button repeatedly to select the brightness of the display

LISTENING TO THE FM RADIO

1. Press and hold the **ON/ PRESETS** button to turn on FM radio. The display shows the radio frequency.
2. **AUTO TUNING**: Press and hold the **TUN- / HOUR** or **TUN+ / MIN** button for approx.1 second, it will start to search the next radio station in the direction of the search. The search operation simply finds stations with strong signals. Stations with weak reception can only be tuned in manually.
3. **MANUAL TUNING**: Press the **TUN- / HOUR** or **TUN+ / MIN** button step by step to tune to the desired radio stations manually..
4. For better reception, Fully extend the FM antenna.
5. To turn off the radio, press and hold the **OFF/ AL 1 / VOL -** button.

SAVING A RADIO STATION TO THE MEMORY

1. In Radio mode, tune to the desired FM station.
2. Press and hold the **ON/ PRESETS** button to store this radio station in the next memory station number. The LED display will show **PXX** (XX is the memory station number from 01 to 10) and flash.
3. Press **TUN- / HOUR** or **TUN+ / MIN** button to select the number of memory station number.
4. Press **ON/ PRESETS** button to confirm.
5. Up to 10 FM radio stations can be stored in the memory.

TO LISTEN TO A SAVED RADIO STATION

In Radio model, press the **ON/PRESETS** button to skip to the next stored radio station.

SLEEP TO MUSIC FUNCTION

1. This function allows you to listen to the radio/Bluetooth/USB while you fall asleep.
2. In radio mode, press the **SNOOZE/SLEEP/DIMMER** button, the display will show the default sleep time of 90 minutes.
3. Press the **SNOOZE/SLEEP/DIMMER** button repeatedly to set the desired sleep time. (90-80-70-60-50-40-30-20-10 min. or OFF)
4. After the pre-set time has elapsed, the radio will turn off automatically.

CHARGE YOUR DEVICES/PHONES

1. CHARGE WITH USB PORT (2.4A)

Connect the standard size end of a USB cable (not included) to the USB port at the back of the unit and connect the other end to the charging port of your device.

The unit contains one USB port with **5V ~ 2.4A** charging.

Remarks: Some devices may not support USB charging or may require a higher power rating than this product provides. Observe the charging status on your device. Ensure your device is working properly before attempting to charge. Charging function may not be supported for all phones or electronic devices

2. Qi WIRELESS CHARGING

Place a Qi supported smartphone on the Qi Wireless Charging Pad. .

Check the charging icon displayed on the phone's screen for the charging status.

- While charging, the Qi indicator will keep flashing slowly. (Android Phones and Apple Phones)
- Fully charged: the Qi indicator will remain on for some specific Android phones. For other smartphones, the Qi indicator will keep flashing slowly.
- Improper charging error**: the Qi indicator will keep flashing rapidly. (Android Phones and Apple Phones)

The wireless charger is compatible with Wireless Power Consortium (WPC) certified devices.

Note **:

- Do not place foreign materials, such as metal objects, magnets and magnetic stripe card between the mobile device and the wireless charger. The mobile device may not charge properly or may be damaged due to overheating.
- Wireless charging may not work properly if you have attached a thick case to your mobile device. If your case is thick, remove it before placing your mobile device on the wireless charger.
- If the mobile device is not placed properly on the charging surface, or depending on the location of the mobile device's wireless charging coil, your mobile device may not charge properly.
- When the mobile device is fully charged, remove it from the wireless charger.