



## CD/MP3 Boombox with Radio, Bluetooth USB decoding and USB charging

Model : HX- 318CD

(Bluetooth Pairing code: HX- 318CD HANNLOMAX)



### INSTRUCTION MANUAL

**Note:** Please read and follow these instructions before using your unit.

1. Read these instructions. Keep these instructions. Heed all warnings. Follow all instructions.
2. Do not use this apparatus near water.
3. Clean only with dry cloth.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
6. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
7. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
8. Only use attachments/accessories specified by the manufacturer.
9. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
10. Unplug this apparatus during lightning storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
12. Grounding or Polarization – This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
13. Alternate Warnings – This product is equipped with a three-wire ground-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
14. Ventilation – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
15. The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
16. □: CLASS II apparatus with double insulation, and no protective earth provided.
17. Caution Marking and rating plate was located at bottom enclosure of the apparatus.
18. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
19. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
20. The mains plug is used as disconnect device. The mains plug of apparatus should not be obstructed OR should be easily accessed during intended use. To be completely disconnect the power input, the mains plug or apparatus shall be disconnected from the mains.
21. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
22. Excessive sound pressure from earphones and headphone can cause hearing loss.

#### FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.




– Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.

– Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions :

This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### LOCATION OF CONTROLS

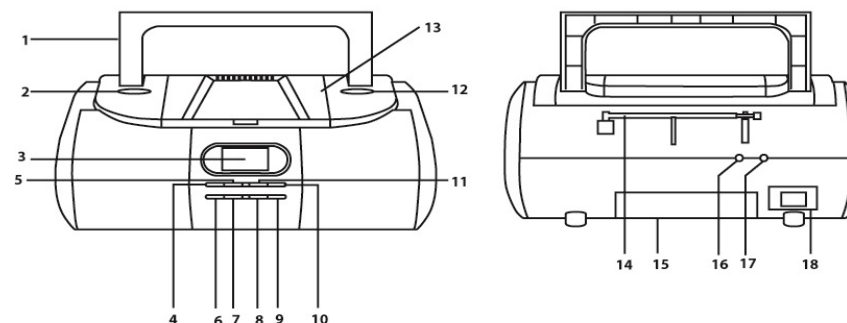

1.	Handle	10.	SKIP UP Button
2.	USB slot (decoding)	11.	SKIP DOWN Button
3.	LCD display	12.	USB slot (1A charging)
4.	Power / Source Button	13.	CD compartment
5.	STOP / M+ Button	14.	FM Antenna
6.	PLAY/ PAUSE / BAND Button	15.	Battery Compartment
7.	MODE / MEM / FOLDER Button	16.	Phones Jack
8.	VOLUME - Button	17.	Aux-In Jack
9.	VOLUME + Button	18.	AC Socket

### AC Power Operation

- Connect the AC Power Cord to your AC household mains outlet and switch on the mains supply. Make sure the voltage is compatible.
- Disconnect the power cord from the mains when not in use.


### ATTENTION

1. Do not plug or unplug the power cable while you have wet hands.
2. When planning not to use this unit for a long time, disconnect the power cable from the wall outlet.
3. When disconnecting the power cord from the wall outlet, do not pull on the cord in order to avoid shock risks caused by damaged cable.

### BATTERY OPERATION

Disconnect the AC Cord Set completely. Open the Battery Compartment Door and insert 6 pieces UM-2 "C" size batteries into the battery compartment with battery polarity as shown inside the battery compartment.

### Specifications

Frequency Range: FM 87.5 - 108 MHz  
Power Supply: AC 100V to 240V ~ 50/60Hz  
DC 9V  (UM-2 x 6)

Specifications are subject to change without further notice.

## **RADIO OPERATION**

Press **POWER / SOURCE** button to select the radio mode. It will show “STEREO” on the LCD display if the signal is strong. Press **BAND** button to switch from **STEREO** to **MONO** and vice versa.

## **MANUAL STATION SELECTION**

Press the **SKIP UP** or **SKIP DOWN** button step by step to tune to the desired radio stations

## **SEARCH STATION OPERATION**

1. Press and hold the **SKIP UP** or **SKIP DOWN** button for approx. 1 second, it will start to search the next radio station in the direction of the search.
2. The search operation simply finds stations with strong signals. Stations with weak reception can only be tuned in manually.
3. Press **VOLUME +** or **VOLUME –** Button for the desired volume level;

## **ANTENNA**

For best reception, fully extend the FM Antenna to receive FM stations.

## **MEMORIZE RADIO STATIONS**

1. TUNE to the desired station.
2. Press **MODE/MEMORY** button, the LCD display will show ' PXX ' (XX indicates the preset memory).
3. Use **SKIP UP** or **SKIP DOWN** button to cycle through the preset stations 1-20
4. Press **MODE/MEMORY** button to store the radio station in the memory.
5. Repeat steps from 2 to 3 to store more tracks in memory. You can store up to 20 radio stations in the memory.

## **TO SELECT THE RADIO STATION IN THE MEMORY**

Press **STOP /M+** button for the radio station memory and press the **STOP/ M+** button skip up to the next memory station.

## **CD/MP3 PLAYBACK FUNCTION**

To play a CD/MP3 disc, please follow the steps underneath:

1. Press **POWER / SOURCE** button and select the CD mode.
2. Open the CD door, Insert the disc with the printed side facing up and close the CD door;
3. Disc information (total number of tracks) will appear on the LCD display and play automatically.
4. For MP3 disc, press and hold the **FOLDER** button and LCD display will show “FOLDER”. Use **SKIP UP** or **SKIP DOWN** button to select the folder you want to listen.
5. Press **VOLUME +** or **VOLUME –** Button for the desired volume level;
6. Press **STOP** button to stop playing the disc.

## **PROGRAMMING THE CD/MP3 DISC**

The programming of the CD/MP3 disc should be done during **STOP** mode.

1. Press **MODE/MEMORY** button, LCD display will show ' PXX ' (XX indicates the preset number of track to be programmed).
2. Press the **SKIP UP** or **SKIP DOWN** buttons to select the desired track.  
Press the **MEMORY** button again to store this track in memory.
3. Repeat steps from 2 to 3 to store more tracks in memory. You can store up to 20 tracks in the memory for CD disc and 99 tracks in the memory for MP3 disc. ( Display will show “FUL”)
4. Press the **PLAY/PAUSE** button to play the disc in the programmed order.
5. To stop playing, press the **STOP** button.
6. To cancel the programming list, press the **STOP** button and open the CD door or press **SOURCE** button.

## **PLAYING MP3 FILES WITH USB**

1. Press the **POWER / SOURCE** Button to select the **USB** mode.
2. Plug your USB device into the USB port on the unit, the unit will start reading the files in the USB device, it will show the total number of tracks of the device after reading. Please be reminded to connect your USB card to the correct USB slot.
3. Press the **Play/Pause** Button to start playing the MP3 files.
4. Press and hold the **FOLDER** button and LCD display will show “FOLDER”. Use **SKIP UP** or **SKIP DOWN** button to select the folder you want to listen.
5. During playing, press the **PLAY/PAUSE** Button to temporarily pause playing. To resume, press the **Play/Pause** Button again.

## **Skip Mode**

1. During play or pause mode, press the **SKIP UP** Button to go to the next track.
2. During play or pause mode, press the **SKIP DOWN** Button to go back to the previous track.

## **Different Play Mode**

Press the **MODE** Button to select different kinds of play mode with the following sequence.

For Audio CDs : **Repeat One** ➡ **Repeat All** ➡ **Normal**

For MP3 Files : **Repeat One** ➡ **Repeat Folder** ➡ **Repeat All** ➡ **Normal**

- Repeat One– repeat the track being played.
- Repeat All – repeat all the tracks in the storage media.
- Repeat Folder – repeat all the tracks in the entire album/folder.
- Normal – play the tracks in sequence

## **AUX IN CONNECTION**

1. Press **POWER / SOURCE** button and select the **Aux-in** mode.
2. Insert one side of the audio cable (requires 3.5mm stereo plug, not supplied) into the line-out jack or phones jack on your audio device and the other side to the aux-in jack on the unit.
3. Turn on your audio device and follow the playback instruction.
4. To stop this function, simply turned off your audio device.

## **BLUETOOTH STREAMING**

1. Press **POWER / SOURCE** button and select the **bluetooth** mode. The LCD display will show “bt” and Bluetooth logo will flash.
2. Turn on your Bluetooth of your Bluetooth device and search the boombox for connection. Your Bluetooth device should find “**HX-318CD HANNLOMAX**”.
3. If the connection is successful, the Bluetooth logo will stop flashing.
4. Select and play the audio files through your Bluetooth device.
5. To stop this function, switch to other mode or shut down your Bluetooth of your Bluetooth device

## **AUTO PAIRING**

Once the unit paired with the Bluetooth device, it will automatically pair with that device next time when you turn on the unit and that Bluetooth device.

## **USB CHARGING(1 A)**

This product can provide 1A charging when it is under AC operation. You can charge most of the smartphones and tablets. Please be reminded to connect your device to the correct USB slot.