



CD Boombox with Radio Model : HX- 319CD



INSTRUCTION MANUAL

Note: Please read and follow these instructions before using your unit.

1. Read these instructions. Keep these instructions. Heed all warnings. Follow all instructions.
2. Do not use this apparatus near water.
3. Clean only with dry cloth.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
6. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
7. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
8. Only use attachments/accessories specified by the manufacturer.
9. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
10. Unplug this apparatus during lightning storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
12. Grounding or Polarization – This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
13. Alternate Warnings – This product is equipped with a three-wire ground-type plug, a plug having a third (grounding) pin. This plug will only into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
14. Ventilation – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
15. The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
16. □: CLASS II apparatus with double insulation, and no protective earth provided.
17. Caution Marking and rating plate was located at bottom enclosure of the apparatus.
18. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
19. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
20. The mains plug is used as disconnect device. The mains plug of apparatus should not be obstructed OR should be easily accessed during intended use. To be completely disconnect the power input, the mains plug or apparatus shall be disconnected from the mains.
21. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
22. Excessive sound pressure from earphones and headphone can cause hearing loss.


FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

LOCATION OF CONTROLS

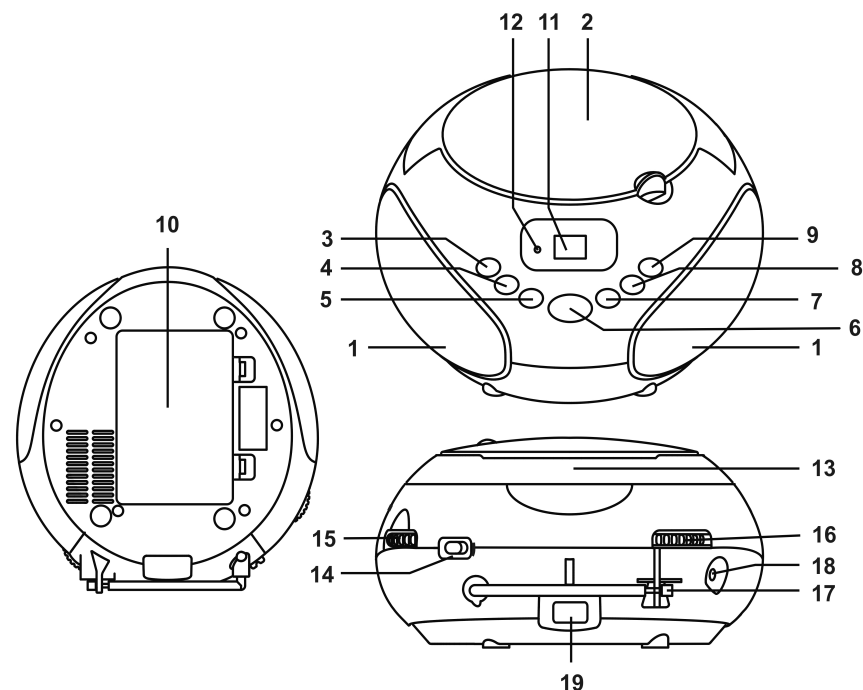

1	Speakers	11	LED Display
2	CD Compartment	12	Power Indicator
3	SKIP DN Button	13	Handle
4	SKIP UP Button	14	FUNCTION Switch
5	PROGRAM Button	15	TUNING Control
6	RANDOM Button	16	VOLUME Control
7	REPEAT Button	17	Antenna
8	STOP Button	18	Aux-In Jack
9	PLAY/PAUSE Button	19	AC Socket
10	Battery Compartment		

SPECIFICATIONS

Frequency Range:

AM 530 - 1710 KHz

FM 88 - 108 MHz

Power Supply:

AC 120V ~ 60Hz

DC 9V  (UM-2 x 6)

Specifications are subject to change without further notice.

AC OPERATION

Before operation, please make sure that the VOLTAGE mentioned on the unit is same as the voltage of your local area. Unravel the AC power cord, insert one end into the AC socket on the set, and the other end into a standard AC outlet.

ATTENTION

1. Do not plug or unplug the power cable while you have wet hands.
2. When planning not to use this unit for a long time, disconnect the power cable from the wall outlet.
3. When disconnecting the power cord from the wall outlet, do not pull on the cord in order to avoid shock risks caused by damaged cable.

BATTERY OPERATION

Disconnect the AC cord set completely. Open the battery compartment door and insert 6 pieces UM-2 "C" size batteries into the battery compartment with battery polarity as shown inside the battery compartment.

RADIO OPERATION

1. Set the FUNCTION switch to **AM** or **FM** position.
2. Rotate the **TUNING** control to tune to your desired radio station.
3. Adjust the sound level by rotating the **VOLUME** control.
4. To turn off the radio, set the FUNCTION switch to **AUX/OFF** position.

ANTENNA

For best reception, fully extend the FM Antenna to receive FM stations. For AM reception, the unit has a built-in antenna, turn the whole unit for best reception.

CD OPERATION

1. Set the **FUNCTION** switch to the **CD** position.
2. Insert the CD disc in the CD compartment and close the CD door, the unit will start reading the disc, the LED display will show the total number of tracks of the entire disc after reading.
3. To start playing the CD, press the **PLAY/PAUSE** button.
4. Adjust the **VOLUME** Control to the desired volume level.
5. To stop playing the CD, press the **STOP** button.

Skip Mode

1. During play or pause mode, press the **SKIP UP** button to go to the next track.
2. During play or pause mode, press the **SKIP DN** button to go back to the beginning of the track.
3. During play mode, press the **SKIP DN** button twice will go back to the previous track.

Programming the CD Player

The programming of the CD player should be done during **STOP** mode.

1. Press the **PROGRAM** button, the LED display will show ' 01 ' and flash continuously.
2. Press the **SKIP UP** or **SKIP DN** buttons to select the desired track.
3. Press the **PROGRAM** button again to store this track in memory, the LED will show ' 02 ' and flash continuously.
4. Repeat steps from 2 to 3 to store more tracks in memory. You can store up to 20 tracks in the memory.
5. Press the **PLAY/PAUSE** button to play the disc in the programmed order.
6. To stop playing, press the **STOP** button.
7. To cancel the programming list, press the **STOP** button and open the CD door or set the FUNCTION switch to **AUX/OFF** position.

Repeat Mode

Repeat 1 : Press the **REPEAT** button once, the repeat LED indicator will light and flash continuously. This single track will be repeated.

Repeat All : Press the **REPEAT** button twice, the repeat LED indicator will stay lighted. The whole disc will be played continuously.

To Cancel Repeat Function : Press the **REPEAT** button until the lighted repeat LED indicator turned off.

Random Mode

Press the **RANDOM** button in stop mode or during play, all tracks on the disc will be played in random order selected by the CD player.

MP3/AUX IN CONNECTION

1. Insert one side of the audio cable (requires 3.5mm stereo plug, not supplied) into the line-out jack or phones jack on your MP3 player and the other side to the aux-in jack on the unit.
2. Turn on the unit and slide the function selector to **AUX/OFF** position.
3. Turn on your MP3 player and follow the playback instruction.
4. To stop this function, simply turned off your MP3 player.